


	VITAL TECHNICAL SDN. BHD.	  
	Technical Data Sheet	
	VT-132 Bathroom & Sanitary Sealant	

Issuance date: 31/03/08

Revision date: 30/09/20

Revision No.: 20-02


Product Specification:

Curing system	: Oxime
Appearance	: Paste
Color	: White
Odor	: Slight unique odor
Specific gravity	: 1.00
Tack-free time	: 15 – 30 minutes
Tensile at break	: ≥0.9 MPa
Elongation at break	: >300 %
Application temperature	: -20 °C to 50 °C
Service temperature	: -50 °C to 150 °C
Shelf life	: 24 months
Features	: Mildew resistant (Anti-fungus) : Durable : Indoor and outdoor use

Packaging

Product Code	Content	Inner Box	Carton
VT-132	75 g tube card	12	144
VT-132-32	32 g tube card	12	144

(Scan to learn how to use)

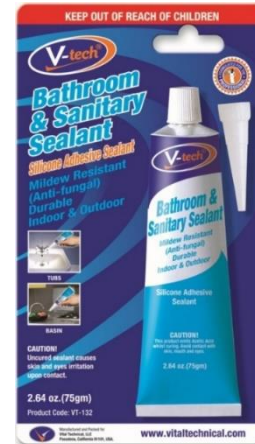

Visit product page:

<https://vitaltechnical.com/product/vt-132-bathroom-sanitary-sealant/>

Product Description:

A one-component, mildew resistant, neutral-cure silicone sealant formulated for applications in areas where high humidity and temperature may be encountered. It will bond to form a durable, flexible, waterproof seal on many common wet area building materials.

Applications:

Good adhesion on most ceramics, glass and plastics. Widely used for grouting ceramic tiles, bedding tile accessories and sealing shower heads, tubs, rimless, sinks, kitchen and bathroom fixtures.

Directions:

1. Surfaces must be clean, dry and free of dirt, grease, oil or water. Puncture the tube with the cap and install nozzle.
2. Squeeze tube and push sealant ahead of nozzle to achieve a smooth finish. Sealant skins in 5 minutes, dries to touch in 1 hour and is fully cured in 24 hours.
3. Uncured sealant can be cleaned up with mineral spirits.
4. Replace cap after use and store in a cool, dry place.

Caution:

Product releases methylethylketoxime during application and curing. May cause an allergic skin reaction. Causes serious eye irritation. Wear protective gloves and eye protection. IF ON SKIN: Wash with soap and water. IF IN EYES: Rinse continuously with water for several minutes. Remove contact lenses if present and easy to do – continue rinsing. If skin irritation or a rash occurs: Get medical advice/attention. If eye irritation persists: Get medical advice/attention. Wash contaminated clothing before reuse. Keep out of reach of children. Contains aminosilane. May produce an allergic reaction. Safety data sheet available on request. For further health and safety information, consult the latest safety data sheet.

Storage:

- Store in a dry and cool place with temperature below 30 °C.
- Use within 24 months from date of production.

Every endeavour has been made to ensure that the information given herein is true and reliable but it is given only for the guidance of our customers. The company will not accept any responsibility for the loss or damage that may result from the use of the information, due to the possibility of variation of processing or working conditions and of workmanship outside our control. Users are advised to confirm suitability of this product by their own tests.